






1
SRT-Head contents.

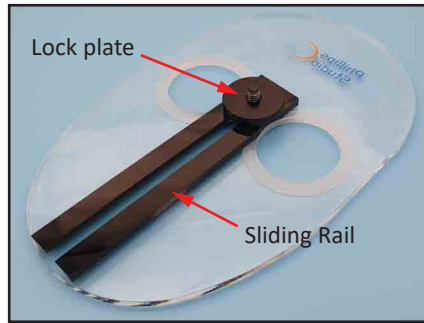


2
Slide the Lock Plate into the Sliding Rail and tighten.

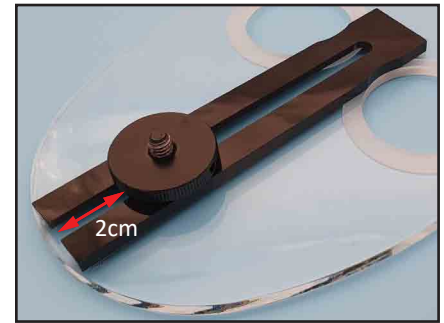

3
For Vertical head positions, place the Lock Plate approximately as shown.

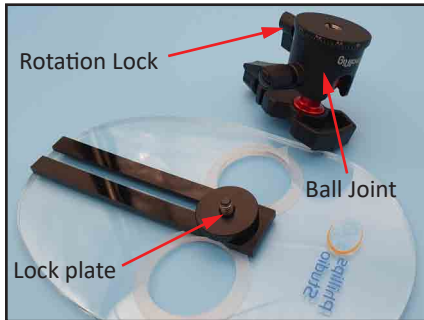

4
Tighten the Rotation Lock and screw the Ball Joint to the Lock Plate.

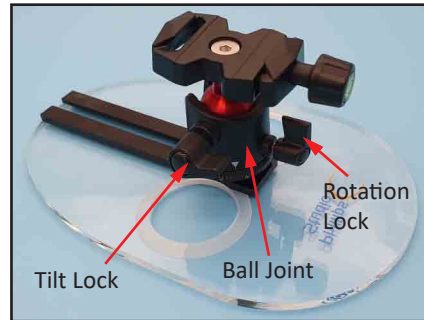

5
Loosen the Rotation Lock and position the Ball Joint as shown.



6
Attach the Ball Joint to the Base Plate using the Quick Release clamp and tighten.



Use the Rings and Eye Sockets to position the eye. Push the Face firmly over the Top Plate to secure the eye. Take care not to overtighten any of the parts.